



CREATIVE DREAMS SINCE 1972



Art. 7473



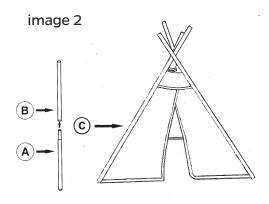

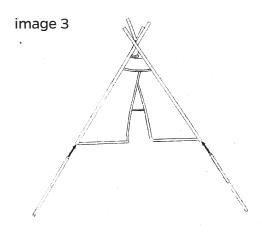

Pre-assembly;

- For your safety and ease, assembly by two adults is recommended.
- Please read all instructions before beginning assembly.

 The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- Remove all parts and hardware from box and lay out on a carpeted or scratch- free work surface. Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts of hardware.
- Use the parts and hardware lists to identify and separate each of the pieces included prior to starting assembly.

Parts included:

- (A) bottom pole half 4 pcs
- (B) top pole half 4 pcs
- (C) Teepee fabric 1 pc

Assembly instructions:

- 1. Put all parts on a carpeted or scratch- free work surface. Connect bottom pole halves (A) to top pole halves (B) as shown in image 2.
- Slide connected poles into (4) holes as shown at bottom corners as shown in image 3.
 Cover bottoms of holes with attached Velcro to protect flooring.
- 3. Place teepee upright. Arrange poles so each pole rests on the outside of the pole to its left. Tie strap around all 4 poles to secure placement.

Assembly is now complete.

For indoor use only

Materials:

80% cotton (fabric) & 20% metal (poles)

WARNING:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM TEEPEE FABRIC.

Washinstructions:

30° Gentle machine wash (without poles)











fachine wash 30°

Do not tumb

Cool iron

o not dry clean